





Micro IV CO Sensor Replacement


1. Before replacing the sensor, the battery must first be removed. Slide the battery cover up. Then take the battery out.

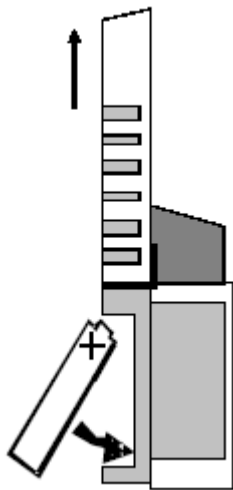


2. To access the sensor, slide the cover all the way up to remove it completely. The sensor can now be pulled from its socket and be replaced with the new sensor. When inserting the new sensor gently push it in to place. Note that the connector on the sensor and the instrument are keyed, so please observe orientation of the sensor before installing.

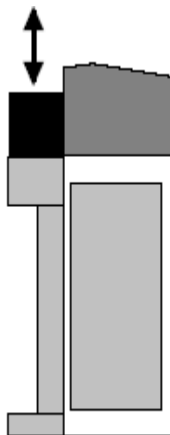

3. Reinstall the battery or replace it with a new battery. Use only approved battery type (Duracell PROCELL MN 1500 LR 6 AA) and make sure to install with correct polarity; + inserted first and facing up.

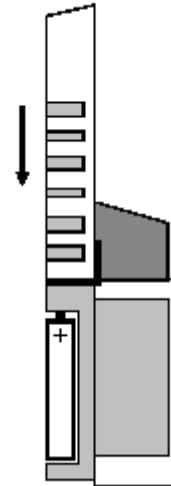

4. Slide the cover back and turn the instrument on.

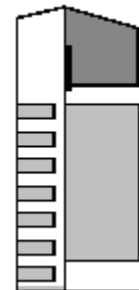

Sensor replacement is complete.

Please remember to fill out the sensor replacement form and return it to GfG.

Remember following a sensor replacement the instrument must be calibrated.